



# Network Video Recorder

Installation Manual

***DR-2504P***

***DR-2504P-A***

***DR-2504P-B***

***DR-2504P-C***

***DR-2508P***

***DR-2508P-A***

***DR-2516P***

***DR-2516P-A***



Powered by **Direct IP**

# Before reading this manual

This manual contains basic instructions on installing and using DirectIP Network Video Recorder, an IDIS product. Users who are using this product for the first time, as well as users with experience using comparable products, must read this manual carefully before use and heed to the warnings and precautions contained herein while using the product. Safety warnings and precautions contained in this manual are intended to promote proper use of the product and thereby prevent accidents and property damage and must be followed at all times. Once you have read this manual, keep it at an easily accessible location for future reference.

- The manufacturer will not be held responsible for any product damage resulting from the use of unauthorized parts and accessories or from the user's failure to comply with the instructions contained in this manual.
- It is recommended that first-time users of DirectIP™ Network Video Recorder and individuals who are not familiar with its use seek technical assistance from their retailer regarding product installation and use.
- If you need to disassemble the product for functionality expansion or repair purposes, you must contact your retailer and seek professional assistance.
- Both retailers and users should be aware that this product has been certified as being electromagnetically compatible for commercial use. If you have sold or purchased this product unintentionally, please replace with a consumer version.

## Safety Precautions



	<b>CAUTION</b>	
RISK OF ELECTRIC SHOCK DO NOT OPEN		
<b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Symbol	Publication	Description
	<b>IEC60417, No.5032</b>	Alternating current
	<b>IEC60417, No.5031</b>	Direct current

## Important Safeguards

- 1. Read Instructions** All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** The safety and operating instructions should be retained for future reference.
- 3. Cleaning** Unplug this equipment from the wall outlet before cleaning it. Do not use liquid aerosol cleaners. Use a damp soft cloth for cleaning.
- 4. Attachments** Never add any attachments and/or equipment without the approval of the manufacturer as such additions may result in the risk of fire, electric shock or other personal injury.
- 5. Water and/or Moisture** Do not use this equipment near water or in contact with water.
- 6. Ventilation** Place this equipment only in an upright position. This equipment has an open-frame Switching Mode Power Supply (SMPS), which can cause a fire or electric shock if anything is inserted through the ventilation holes on the side of the equipment.
- 7. Accessories**  
Do not place this equipment on an unstable cart, stand or table. The equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.



This equipment and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the equipment and cart combination to overturn.

- 8. Power Sources** This equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power, please consult your equipment dealer or local power company. You may want to install a UPS (Uninterruptible Power Supply) system for safe operation in order to prevent damage caused by an unexpected power stoppage. Any questions concerning UPS, consult your UPS retailer. This equipment should remain readily operable.
- 9. Power Cords** Operator or installer must remove power and TNT connections before handling the equipment.
- 10. Lightning** For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.
- 11. Overloading** Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- 12. Objects and Liquids** Never push objects of any kind through openings of this equipment as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the equipment.
- 13. Servicing** Do not attempt to service this equipment yourself. Refer all servicing to qualified service personnel.
- 14. Damage requiring Service** Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - A. When the power-supply cord or the plug has been damaged.
  - B. If liquid is spilled, or objects have fallen into the equipment.
  - C. If the equipment has been exposed to rain or water.
 instructions, adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
  - E. If the equipment has been dropped, or the cabinet damaged.
  - F. When the equipment exhibits a distinct change in performance this indicates a need for service.

**15. Replacement Parts** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

**16. Safety Check** Upon completion of any service or repairs to this equipment, ask the service technician to perform safety checks to determine that the equipment is in proper operating condition.

**17. Field Installation** This installation should be made by a qualified service person and should conform to all local codes.

**18. Correct Batteries** Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas. A BATTERY subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Laisser une BATTERIE dans un environnement extrêmement chaud peut entraîner une EXPLOSION ou une fuite de liquide ou de gaz inflammable. Une BATTERIE soumise à une pression d'air extrêmement faible peut également entraîner une explosion ou une fuite de liquide ou de gaz inflammable.

**19. Tmra** A manufacturer's maximum recommended ambient temperature (Tmra) for the equipment must be specified so that the customer and installer may determine a suitable maximum operating environment for the equipment.

### 20. Elevated Operating Ambient Temperature

If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the manufacturer's maximum rated ambient temperature (Tmra).

**21. Reduced Air Flow** Installation of the equipment in the rack should be such that the amount of airflow required for safe operation of the equipment is not compromised.

**22. Mechanical Loading** Mounting of the equipment in the rack should be such that a hazardous condition is not caused by uneven mechanical loading.

### 23. Circuit Overloading

Consideration should be given to connection of the equipment to supply circuit and the effect that overloading of circuits might have on over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

### 24. Reliable Earthing (Grounding)

Reliable grounding of rack mounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

### 25. Children

This equipment is not suitable for use in locations where children are likely to be present.

Cet équipement ne convient pas à une utilisation dans des lieux pouvant accueillir des enfants.

### 26. Grounding



The equipment protective earthing conductor should be connected to the installation protective earthing conductor.

Le fil de mise à la terre de protection de l'équipement

### HDMI Port Precautions

- Use a certified cable marked with an HDMI logo when using HDMI. The screen may not display or a connection error may occur if you do not use a certified HDMI cable.
- It is recommended that you use the following HDMI cable type.
  - High-speed HDMI Cable
  - High-speed HDMI Cable with Ethernet

## In-Text

Symbol	Type	Description
	<b>Caution</b>	Important information concerning a specific function.
	<b>Note</b>	Useful information concerning a specific function.

## User's Caution Statement

Caution: Any changes or modifications to the equipment not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

## FCC Compliance Statement

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS A DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE WHEN THE EQUIPMENT IS OPERATED IN A COMMERCIAL ENVIRONMENT. THIS EQUIPMENT GENERATES, USES, AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTION MANUAL, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. OPERATION OF THIS EQUIPMENT IN A RESIDENTIAL AREA IS LIKELY TO CAUSE HARMFUL INTERFERENCE, IN WHICH CASE USERS WILL BE REQUIRED TO CORRECT THE INTERFERENCE AT THEIR OWN EXPENSE.

**WARNING:** CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

THIS CLASS OF DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE CAUSING EQUIPMENT REGULATIONS.

## WEEE (Waste Electrical & Electronic Equipment)

### **Correct Disposal of This Product**

**(Applicable in the European Union and other European countries with separate collection systems)**



This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

## Copyright

© 2024 IDIS Co., Ltd.

IDIS Co., Ltd. reserves all rights concerning this manual.

Use or duplication of this manual in part or whole without the prior consent of IDIS Co., Ltd. is strictly prohibited.

Contents of this manual are subject to change without prior notice.

## Registered Trademarks

IDIS is a registered trademark of IDIS Co., Ltd.

Other company and product names are registered trademarks of their respective owners.

The information in this manual is believed to be accurate as of the date of publication even though explanations of some functions may not be included. We are not responsible for any problems resulting from the use thereof. The information contained herein is subject to change without notice. Revisions or new editions to this publication may be issued to incorporate such changes.

The software included in this product contains some Open Sources. You may obtain the corresponding source code which we have to distribute according to the license policy. Go to System Setup - About page for more information. This product includes software developed by the University of California, Berkeley and its contributors, and software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>). Also, this product includes cryptographic software written by Eric Young ([eay@cryptsoft.com](mailto:eay@cryptsoft.com)), and software written by Tim Hudson ([tjh@cryptsoft.com](mailto:tjh@cryptsoft.com)).

Covered by one or more claims of the patents listed at [patentlist.accessadvance.com](http://patentlist.accessadvance.com).

# Table of Contents

---

## 1

### **Part 1 – Introduction..... 7**

Product Features .....	7
Accessories.....	8
Overview .....	9
Front Panel.....	9
Dimensions.....	11
Rear Panel .....	12
Rear Panel Connections .....	14
Remote Control (Optional).....	17

## 2

### **Part 2 - Appendix..... 19**

System Log Types .....	19
Error Code Types .....	20
Troubleshooting .....	23
Specifications .....	24

# Part 1 – Introduction

 
## Product Features

This is a DirectIP-enabled video recorder that supports surveillance, recording, and playback of video from network cameras (or video encoders).

This NVR (Network Video Recorder) unit offers the following features:


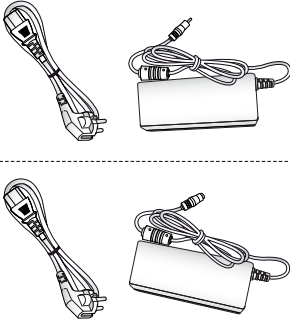 
 



- Real-time 4/8/16-channel DirectIP network surveillance
- Network camera zero configuration
- Configuration-free network camera access
- Supports up to Full HD 480ips video recording
- HDMI out (1) and VGA out (1) ports
- Fast and easy search feature (Time-Lapse, Event log, Text-In)
- Simultaneously survey, record, play back, and transmit data in real-time
- Graphic User Interface(GUI) and multilingual
- Multiple recording modes (Schedule, Event, Pre-Event, and Panic)
- PoE-enabled Camera Connection
- 1 x USB 2.0, 1 x USB 3.0 ports (for connecting peripherals, upgrading software, and saving recording data)
- 2 internal SATA3 HDD bays and 1 eSATA port
- Network camera audio recording and 1-channel audio playback
- 4 alarm ins and 1 alarm out
- IR remote control-enabled
- Self-diagnosis and automated system event alerts (industry standard S.M.A.R.T. protocol for HDD status alerts)
- Records the same data on the two disks at the same time

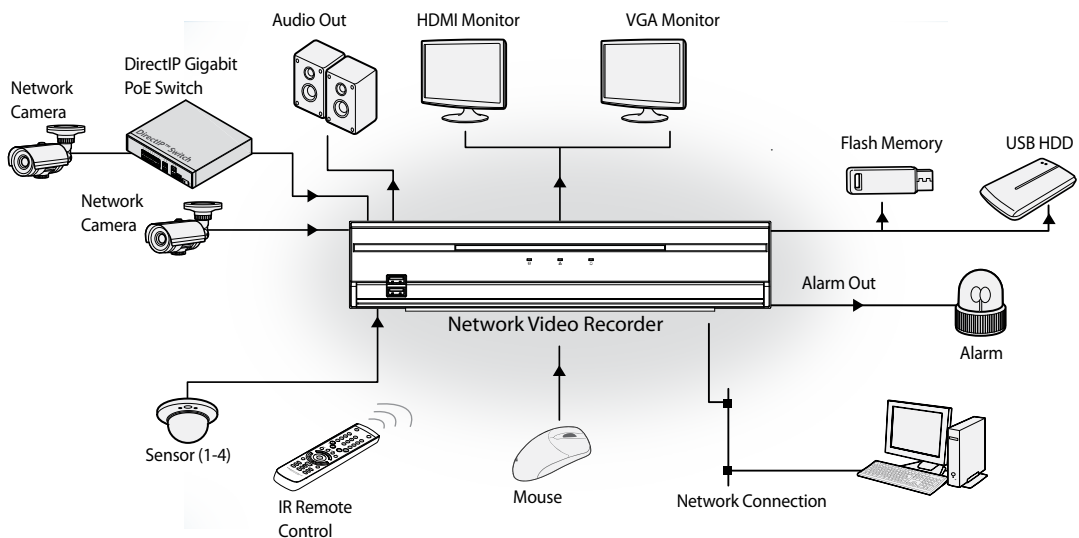This document covers the 4-, 8- and 16-channel network video recorders. The NVRs are identical except for the number of cameras and alarms that can be connected and the number of cameras that can be displayed. For simplicity, the illustrations and descriptions in this document refer to the 16-channel model.




## Accessories

 Upon unpackaging the product, check the contents inside to ensure that all the following accessories are included.

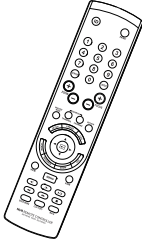		
<p>Network Video Recorder</p>	<p>Power Cable / DC Adapter(12V, 48V or 54V ) *Above image may differ slightly from the actual product.</p>	<p>Quick Guide</p>
		
<p>Assembly Screws for Adding Hard Disk Drives</p>	<p>Optical USB Mouse</p>	<p>IR Remote Control (Optional)</p>

## Overview
 
### Front Panel

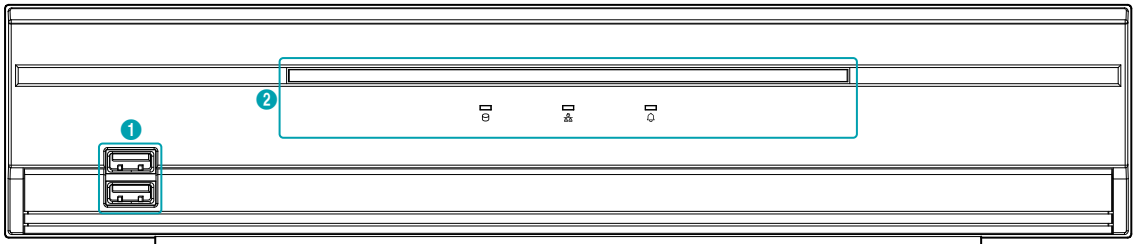

#### 1 USB Ports

#### 2 LEDs

- Remote control sensor is located on the bottom center of the front panel. Ensure that the sensor remains unobstructed at all times. If obstructed, the sensor might not be able to receive remote control signals.
- Placing a Wi-Fi, Bluetooth, or any other wireless communication device near the NVR may interfere with remote control signal transmission.
- Access various windows and menus using a USB mouse as you would on a personal computer.
- For easier system configuration, a USB mouse is recommended.

#### 1 USB Ports

##### • Storage Device Connection

Connect an external USB hard drive or a USB flash memory device to one of the USB ports for use with the Clip Copy feature. The external storage device should be placed as close to the NVR as possible. It is recommended that you use a connection cable that is no longer than 180cm in length. Use the connection cable included with your external storage device to connect the device to one of NVR's USB ports. For more information Clip Copy, refer to the **Clip Copy in the operation manual**.

##### • Peripheral Device Connection

Use the USB ports to connect peripherals such as a USB mouse to the NVR. You can also use a USB-to-serial converter and connect multiple text-in devices to the NVR at the same time.

 


For USB flash memory devices, the NVR supports the FAT32 file format only.

#### 2 LEDs



- **Power LED:** Lights up while the main unit is in operation.
- **HDD LED:** Flashes when data is being written on the HDD or a video search is in progress.
- **Network LED:** Flashes when the main unit is linked to an ethernet.
- **Alarm LED:** Lights up in red when an alarm event occurs.

Connections on the Front Panel

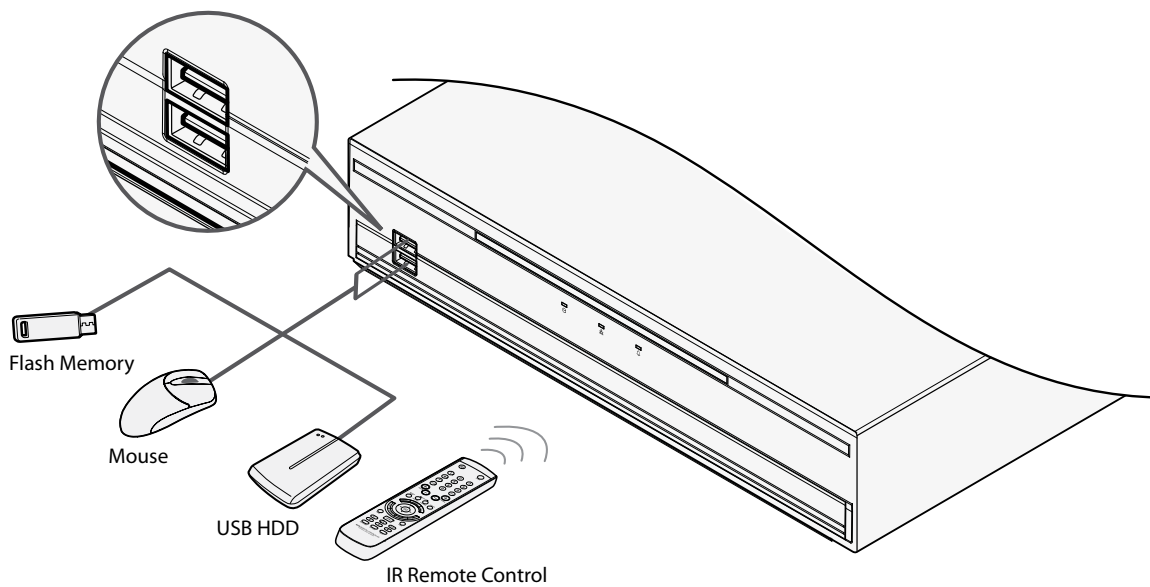


## Dimensions

  (Unit - mm)

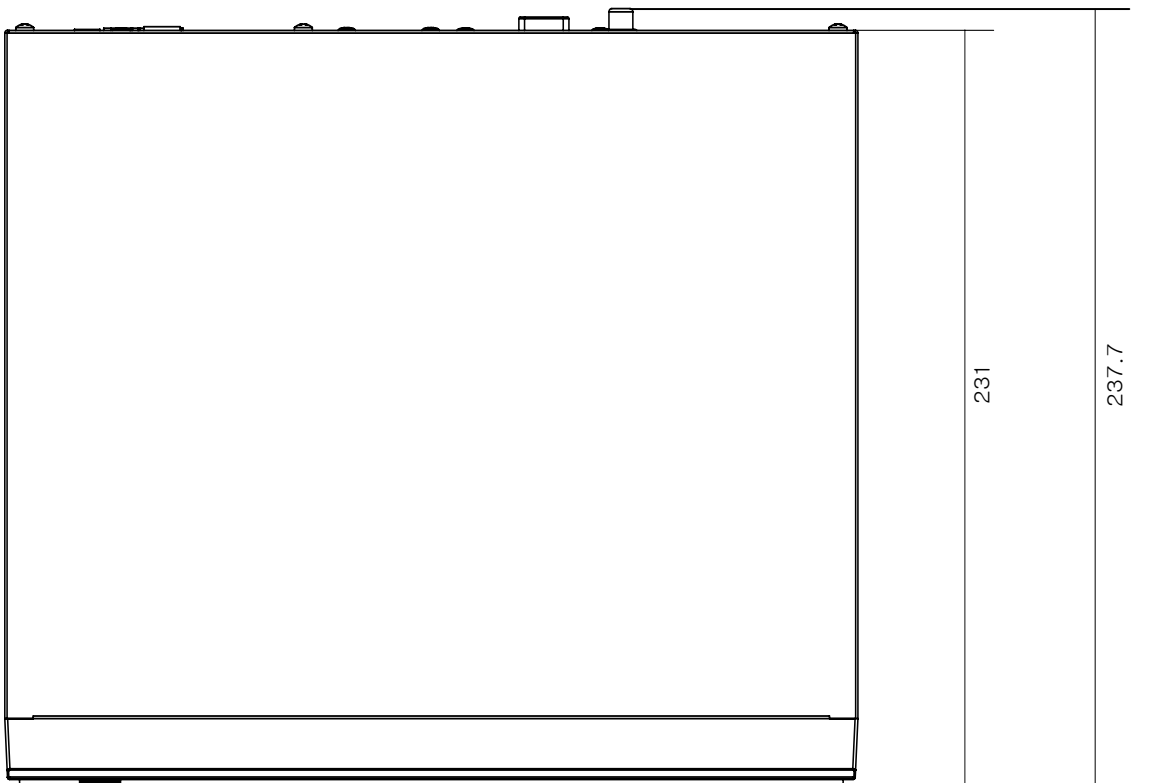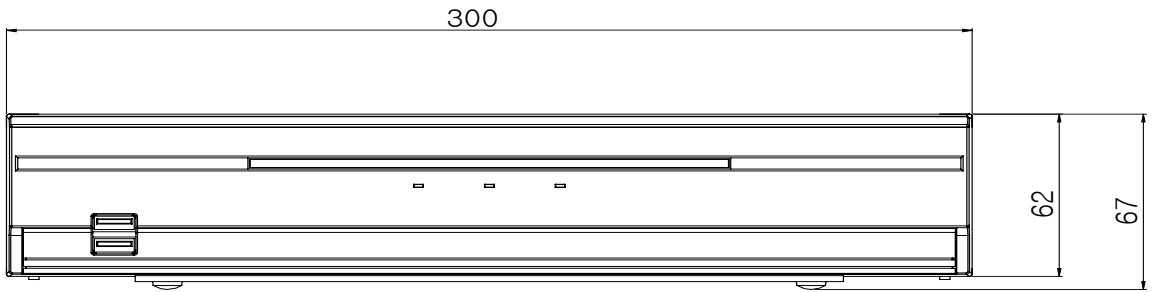


## Rear Panel
 
### DR-2504P[-A/B/C/]

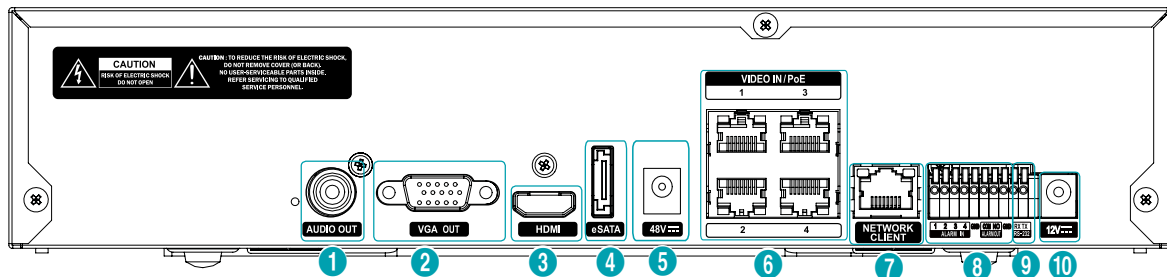


1	Audio Out Port	2	VGA Out Port	3	HDMI Out Port
4	eSATA Port	5	Power In Port (48V)	6	Video In / PoE Ports
7	Network Port	8	Alarm Connection Ports	9	RS-232 Port
10	Power In Port (12V)				

### DR-2508P/DR-2516P

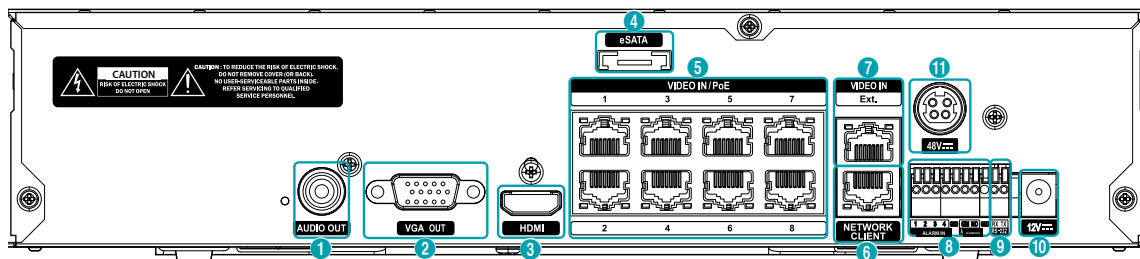 

1	Audio Out Port	2	VGA Out Port	3	HDMI Out Port
4	eSATA Port	5	Video In / PoE Ports	6	Network Port
7	Video In / Ext. Port	8	Alarm Connection Ports	9	RS-232 Port
10	Power In Port (12V)	11	Power In Port (48V)		

 DR-2508P-A/DR-2516P-A

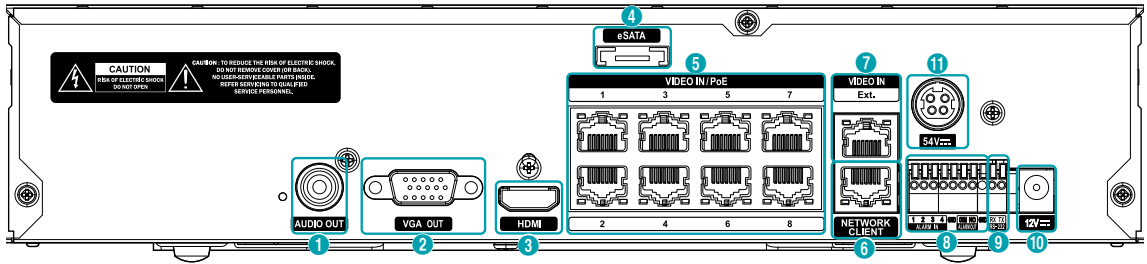


1	Audio Out Port	2	VGA Out Port	3	HDMI Out Port
4	eSATA Port	5	Video In / PoE Ports	6	Network Port
7	Video In / Ext. Port	8	Alarm Connection Ports	9	RS-232 Port
10	Power In Port (12V)	11	Power In Port (54V)		

## Rear Panel Connections

 For simplicity, the illustrations and descriptions in the rear panel connections refer to the 8ch/16ch model.

### Monitor Connection

Connect to the **VGA OUT** or **HDMI** port.



### Audio Connection

 


Connect the speakers with a built-in amplifier to the **AUDIO OUT** port. Use the **AUDIO OUT** port to listen to audio from network cameras.

- This NVR does not feature a built-in audio amplifier unit and therefore requires the user to purchase a speaker system with a built-in amplifier separately.
- Check your local laws and regulations on making audio recordings.

### Video Connection


#### • Video In/PoE Port

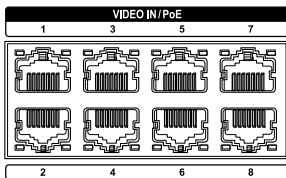

Connect network cameras or video encoders to the NVR using RJ-45 cable (Cat5, Cat5e, or Cat6). The NVR recognizes DirectIP™ network cameras automatically.

- For the external hub, we recommend using an Ext. port to enable functions such as camera alignment.
- Green LED on the right will turn on when PoE comes on line. Orange LED on the left will then flash once a link has been established.
- If more than 16 cameras from video encoders are registered on the NVR, video may not be displayed smoothly in a remote program.

#### • Video In/Ext. Port

 

This port does not support PoE. It's possible to establish a network with network cameras and external hubs using a Cat6 cable.

- This port only supports in 8/16 channel.
- Green LED on the right will turn on if connected to a 1000 BASE-T network. Orange LED on the left will then flash once a link has been established.
- When using a Cat5e cable, the data transfer speed may decrease depending on how to establish a network.

### eSATA Connection

Connect external hard drives to these ports.



- Do not connect or disconnect an eSATA device while the NVR is powered on. To connect an eSATA device, first turn off the NVR and unplug the power cable. Connect the eSATA device and then power the eSATA device first and then NVR back on. To disconnect an eSATA device, first turn off the NVR and unplug the power cable. Turn off the eSATA device and then disconnect the eSATA connection cable.

### Network Connection



This NVR is capable of connecting to networks via an ethernet connector. Connect an RJ-45 cable (Cat5, Cat5e, or Cat6) to the NVR's network port. It's possible to

operate and upgrade the NVR remotely over a network. For more information on ethernet connection setup, refer to **Network Setup in the operation manual.**

- Green LED on the right will begin to flash if connected a 1000 BASE-T network. Orange LED on the left will then flash once a link has been established.

 
### RS-232 Connection

Connect an external device such as a POS unit to this port.



### Alarm Connection

Connect alarm connectors to these ports.

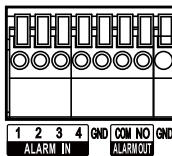

- Press down on the button and insert the cable into the opening. Release the button and then pull on the cable slightly to ensure it is held securely in place. To disconnect the cable, press down on the button again and pull the cable out.

#### • Alarm In 1 through 4

This NVR is capable of responding to event signals from external alarm in devices. Connect mechanical or electrical switches to AI 1 through 4 and the GND (ground) connector. In order to be recognized by the NVR, the signal from an alarm in device must be less than 0.3V and maintained for at least 0.5 seconds. The alarm in voltage range is 0V to 5V. For more information on alarm in setup, refer to the **Alarm-In in the operation manual.**

#### • GND (Ground)

Connect alarm in or out's ground cable to the GND connector.

- All connectors marked "GND" are common connectors.

#### • NO (Relay Alarm Outputs)

This NVR is capable of activating/deactivating buzzers, lights, and other external devices. Connect a mechanical or electrical switch to NO and COM connectors. Electrical specifications are 2A sync at 125VAC and 1A sync at 30VDC. For more information on alarm out setup, refer to the **Alarm-Out in the operation manual.**

 
#### • Connector Arrangement

<b>ALARM IN 1 through 4</b>	Alarm In 1 through 4
<b>GND</b>	Ground
<b>ALARM OUT COM</b>	Relay Common
<b>ALARM OUT NO</b>	Normally Open Relay Alarm Out (connected to COM port)

### Power Cable Connection




This NVR does not feature a separate power on/off button and will turn on the moment power is supplied. Connect the connector(12V) of adapter to the NVR and then connect the AC power cable of adapter to the power outlet.

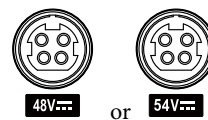


This NVR is built in PSE(Power Source Equipment) to connect the PoE-enabled network camera. Connect the connector(48V or 54V) of adapter to the NVR and then connect the AC power cable of adapter to the power outlet.

- Organize the power cable so that it will not cause people to trip over or become damaged from chairs, cabinets, desks, and other objects in the vicinity. Do not run the power cable underneath a rug or carpet.
- 12V adapter is grounded. Do not modify the power plug even if your power outlet does not have a ground contact.
- Do not connect multiple devices to a single power outlet.

 Connections on the Rear Panel (DR-2508P/DR-2516P)

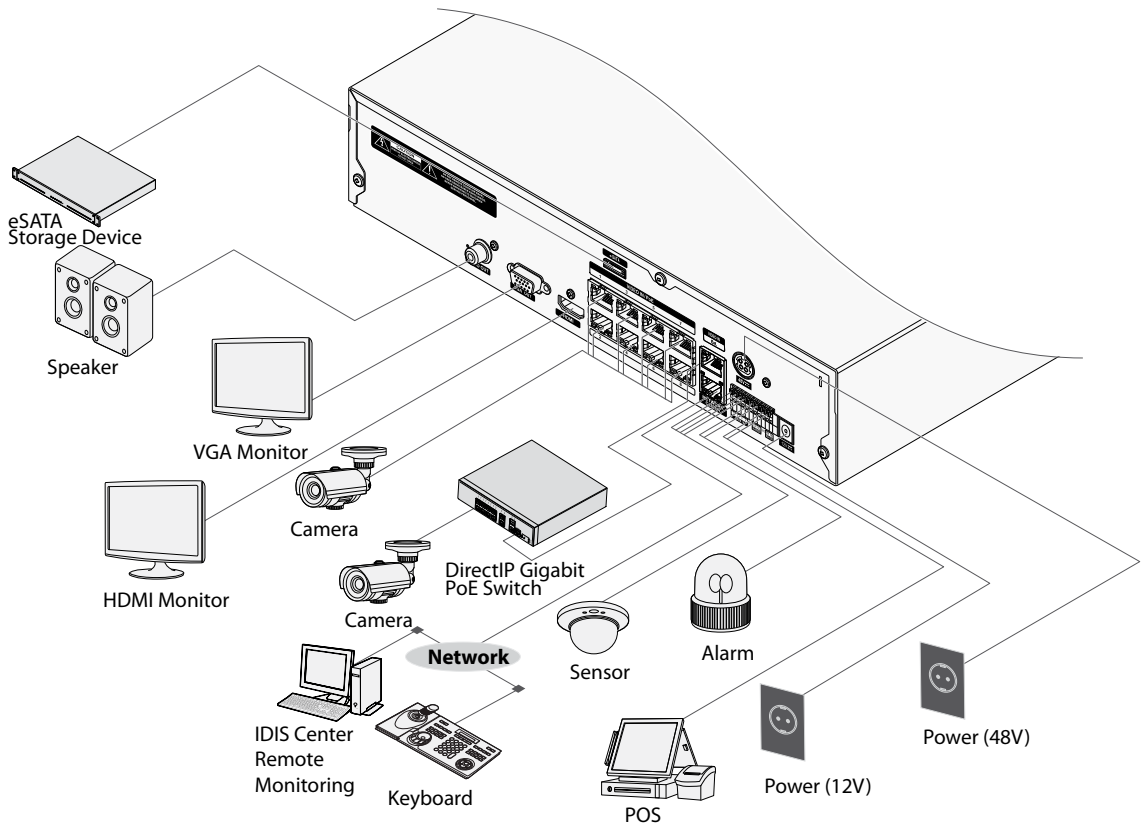


## Remote Control (Optional)

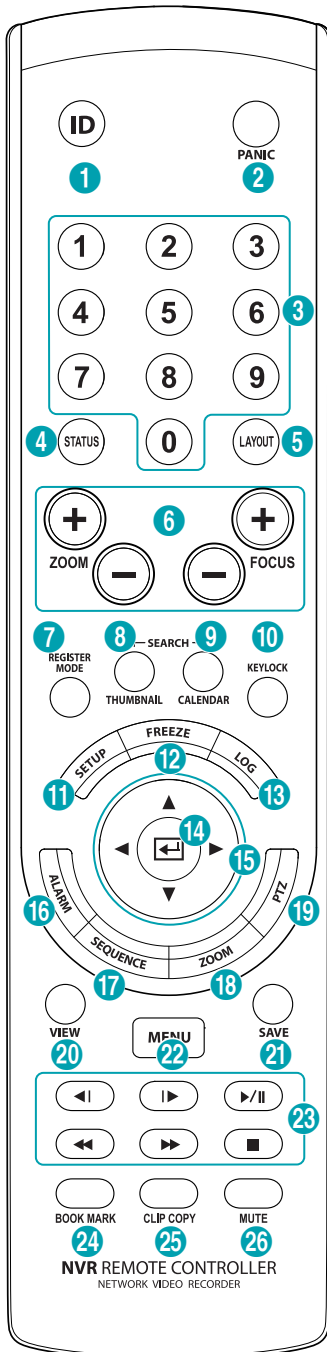 

1	ID Button
2	PANIC Button
3	Camera Buttons
4	STATUS Button
5	LAYOUT Button
6	PTZ Control Buttons
7	REGISTER MODE Button
8	THUMBNAIL Button
9	CALENDAR Button
10	KEYLOCK Button
11	SETUP Button
12	FREEZE Button
13	LOG Button
14	Enter Button
15	Arrow Buttons
16	ALARM Button
17	SEQUENCE Button
18	ZOOM Button
19	PTZ Button
20	VIEW Button
21	SAVE Button
22	MENU Button
23	Playback Buttons
24	BOOKMARK Button
25	CLIP COPY Button
26	MUTE Button

① **ID** Button

Used to assign remote control ID values. No additional remote control assignment is necessary if the system's ID is 0. If the system's ID is a number between 1 and 9, however, you will need to press the ID button and then press the system ID number (1 through 9) on the remote control. The  (remote control) icon will appear on the upper right corner of the NVR screen (status indication area) to indicate successful system-to-remote control pairing. If using multiple systems, it's possible to control all the units with a single remote control as long as all the system IDs are 0. For more information on system IDs, refer to the **System Setup in the operation manual**.

② **PANIC** Button

Pressing this button commences recording irrespective of the current schedule. Press the button again to deactivate Panic Recording mode.

③ **Camera** Buttons

Pressing the **Camera** button while in Live or Playback mode displays images from the selected camera in full screen. To select a camera whose channel is made up of two digits, enter the digits in sequence using the number keys.

④ **STATUS** Button

Displays event recording device and network statuses.

⑤ **LAYOUT** Button

1x1> corridor format > 2x2 > 1+5> 1+7> 3x3 > 1+12 > 4x4.

⑥ **PTZ** Control Buttons

Used in PTZ mode to zoom in/out on the screen and to shift focus between a nearby point and a far away point.

⑦ **REGISTER MODE** Button

Used in Live mode to access Camera Registration mode.

⑧ **THUMBNAIL** Button

Used in Playback mode to access Thumbnail Search mode. Thumbnail Search mode displays thumbnails of video recordings and allows you to search recordings based on date, time, minutes and seconds parameters.

⑨ **CALENDAR** Button

Displays a video recording playback screen that includes a calendar.

⑩ **KEYLOCK** Button

Locks out all remote control keys. To unlock, press the button again.

⑪ **SETUP** Button

Pressing the **SETUP** button while in Live mode displays the setup menu.

⑫ **FREEZE** Button

Used to pause Live screen.

⑬ **LOG** Button

Displays system log window and allows you to search the log.

## Part 2 - Appendix

### System Log Types

Boot Up	Panic On
Shutdown	Panic Off
Restart	Clear All Data
Upgrade	Clear Disk
Upgrade Failure	Format Disk
Power Failure	Disk Full
Time Changed	Auto Deletion
TimeZone Change	Search Begin
Time Sync.	Search End
Time Sync. Failed	Clip-Copy Begin
Disk Bad	Clip-Copy End
Login	Clip-Copy Cancel
Logout	Clip-Copy Failure
Setup Begin	Clip-Copy User
Setup End	Clip-Copy From
Remote Setup Change	Clip-Copy To
Remote Setup Failure	Clip-Copy Duration of Video
Setup Imported	Clip-Copy Camera
Setup Import Failure	Callback Failed
Setup Exported	Factory Reset
Setup Export Failure	Camera Upgrade
Setup Export Canceled	Camera Upgrade Begin
Schedule On	Camera Upgrade End
Schedule Off	Camera Upgrade Failure
	Camera Upgrade User


 

 
 
## Error Code Types

Upgrade Error Codes			
No.	Type	No.	Type
0	Unknown Error	301	Remote Network Error
1	Incorrect File Version	302	No Remote Upgrade Permission
2	Incorrect OS Version	303	Remote Upgrade File Save Failure
3	Incorrect Software Version	304	Remote Upgrade Cancelled by User
4	Incorrect Kernel Version	400	USB Storage Device Mount Failure
100	Storage Device Mount Failure	401	USB Storage Device File Read Failure
101	File Not Found	402	USB Storage Device File Copy Failure
102	File Decompression Failure	403	USB Device Not Connected
103	LILO Execution Failure	404	USB Storage Device in Use
104	Reboot Failure	405	Unsupported File System
105	Improper File	500	Clip Copy in Progress: Upgrade Not Available
300	Remote Connection Failure		

<b>Clip Copy Error Codes</b>			
No.	Type	No.	Type
0	Unknown Error	12	Disk Error
1	Device Error	13	Clip Player Execution File Not Found
2	Device Connection Failure	14	Clip Player Execution File Access Failure
3	CD Media Not Found	15	Clip Player Execution File Save Failure
4	Incorrect Media	16	Image Generation Failure
5	File Name Taken	17	Burn Failure
6	Insufficient Space	18	Burn Time Overrun
7	Temporary File Generation Failure	19	Device Connection Failure
8	Disk Access Failure	20	Device in Use
9	Disk Format Failure	21	Unsupported File System
10	Database Changed	22	Data Validation Failure
11	Save Failure	23	No Saved Data within Range

<b>Network Error Codes</b>			
No.	Type	No.	Type
0	Cause of Failure Unknown	20	Connection Cancelled by User
1	Normal Logout	21	No Response from Network Device Host
2	All Channels in Use - Connection Denied	22	High Network Noise Level
3	Incorrect Product Version Info	23	Transmission Queue Full
4	Incorrect User Name or Password	24	Incorrect OEM Info
5	Forced Disconnection by Admin	25	No Search Permission
6	Timeout	26	Port in Use
7	Network Device Terminated	27	SSL Connection Failure
8	Unable to Connect: No Available Port	28	Network Timeout
9	Server Not in Operation: Unable to Connect	29	Network Device Host Timeout
11	Network Unavailable	30	RTP via TCP Not Supported by Network Device Host
12	Different Network Zone: Unable to Access	31	Socket Error
13	Connection Timeout	100	Unknown CODEC
14	Forced Disconnection by Network Device	101	.jpeg CODEC (not supported)
15	Network Device Host Terminated	103	.mpeg4 CODEC (not supported)
16	Unable to Route to Network Device Host	400	Unsupported Resolution
17	Connection Severed	-1	Normal Access

## Troubleshooting

Problem	Solution
The main unit won't turn on.	<ul style="list-style-type: none"> <li>• Check the power cable connection status.</li> <li>• Check the power outlet.</li> </ul>
Unable to display Live video.	<ul style="list-style-type: none"> <li>• Check the camera's video cable connection status.</li> <li>• Check the monitor's video cable connection status.</li> <li>• Check the camera's power setting.</li> <li>• Check the camera lens settings.</li> </ul>
PoE-enabled camera will not turn on.	<ul style="list-style-type: none"> <li>• Verify that the camera is actually PoE-enabled.</li> <li>• Check the network cable, replace it, and try again.</li> <li>• Check the PoE adapter is not defective and power adapter is properly connected.</li> </ul>
NVR stopped working in the middle of a recording.	<ul style="list-style-type: none"> <li>• Hard disk may be full. Delete video recordings to free up space.</li> <li>• Set the NVR to Recycle mode. For more information, refer to the <b><u>General in the operation manual</u></b>.</li> </ul>
 icon is shown, but video is not being recorded.	<p>If the Pre-Event is enabled, the  and  icons appears when recording is not in progress, or the  and  icons appear when an event occurs and recording is in progress. For more information, refer to the <b><u>Schedule in the operation manual</u></b>.</p>

## Specifications

These product specifications may change without prior notice.

VIDEO	
<b>Video Inputs</b>	4/8/16 IP channels
<b>Video Outputs</b>	1 HDMI, 1 VGA
<b>Display Resolution</b>	HDMI: 3840 x 2160, 1920 x 1200 , 1920 x 1080, 1680 x 1050, 1600 x 1200 VGA : 1920 x 1200, 1920 x 1080, 1680 x 1050, 1600 x 1200
<b>Display Speed</b>	Up to 480ips (16CH) / Up to 240ips (8CH) / Up to 120ips (4CH)

\* If more than 16 cameras from video encoders are registered on the NVR, video may not be displayed smoothly in a remote program.

RECORDING	
<b>Max. Throughput</b>	180Mbps, 480ips @ UHD (16CH) 140Mbps, 240ips @ UHD (8CH) 70Mbps, 120ips @ UHD (4CH)
<b>Compression</b>	H.264, H.265
<b>Recording Mode</b>	Time-Lapse, Event, Pre-Event, Panic

PLAYBACK	
<b>Performance</b>	16ch/8ch/4ch Full HD synchronous playback 4ch 4K playback
<b>Search Mode</b>	Time-lapse, Event log, Motion, Text-in

STORAGE	
<b>HDD</b>	SATA x2, eSATA x1
<b>Total Capacity</b>	36TB = 6TB x (2 + 1x4) DR-2504P/DR-2508P/DR-2516P 24TB = 4TB x (2 + 1x4) DR-2504P-A
<b>Data Export Device</b>	USB HDD, USB Stick

NETWORK	
<b>Video in Connection</b>	Fast Ethernet(IP Camera) x8 +Gigabit Ethernet(Ext) x1 (8CH/16CH) Fast Ethernet(IP Camera) x4 (4CH)
<b>Client Connection</b>	Gigabit Ethernet(Client) x1
<b>Transmission Speed</b>	50Mbps / 100Mbps(BRP Mode)
<b>Camera Power</b>	DR-2508P/DR-2516P PoE(IEEE 802.3at class 4) supported 8 ports, 50W DR-2508P-A/DR-2516P-A PoE(IEEE 802.3at class 4) supported 8 ports, 100W DR-2504P/DR-2504P-A PoE(IEEE 802.3at class 4) supported 4 ports, 30W DR-2504P-B/DR-2504P-C PoE(IEEE 802.3at class 4) supported 4 ports, 50W
<b>Event Notification</b>	Email (attach clip (.cbf) .MP4), Callback to Remote S/W, Push notification (IDIS Mobile)

<b>INTERFACE</b>	
<b>Audio In / Out</b>	Local(NVR) : - / 1RCA + 1HDMI IP Camera : 16 / 16 (Depending on IP Camera) (16CH)
	Local(NVR) : - / 1RCA + 1HDMI IP Camera : 8 / 8 (Depending on IP Camera) (8CH)
	Local(NVR) : - / 1RCA + 1HDMI IP Camera : 4 / 4 (Depending on IP Camera) (4CH)
<b>NVR Alarm Spec- In</b>	4 TTL, NC/NO programmable, 3.0V (NC) or 0.3V (NO) threshold, 5V DC
<b>NVR Alarm Spec- Out</b>	1 relay output, 2A@125VAC, 1A@30VDC (NO)
<b>NVR Alarm Spec - Reset IN</b>	-
<b>Internal Buzzer</b>	Yes
<b>Serial Interface</b>	RS232 (Terminal Block)
<b>USB</b>	USB 2.0 x 1, USB 3.0 x 1
<b>GENERAL</b>	
<b>Operating System</b>	Embedded Linux
<b>Unit Dimensions (W x H x D)</b>	300mm x 62mm x 231 mm (11.8" x 2.4" x 9.1")
<b>Unit Weight</b>	8CH/16CH: 2.3Kg(with 1HDD) / 4CH: 2.2Kg(with 1HDD)
<b>Working Temperature</b>	0°C – 40°C (32°F ~ 104°F)
<b>Operating Humidity</b>	0% – 90%
<b>Power Input</b>	DR-2508P/DR-2516P NVR Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 12V $\overline{\text{---}}$ , 5A) PSE Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 48V $\overline{\text{---}}$ , 1.35A)
	DR-2508P-A/DR-2516P-A NVR Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 12V $\overline{\text{---}}$ , 5A) PSE Adaptor (Input : 100-240V~, 50/60Hz, 2.5A, Output : 54V $\overline{\text{---}}$ , 2.33A)
	DR-2504P/DR-2504P-A NVR Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 12V $\overline{\text{---}}$ , 5A) PSE Adaptor (Input : 100-240V~, 50/60Hz, 1.2A, Output : 48V $\overline{\text{---}}$ , 1A)
	DR-2504P-B/DR-2504P-C NVR Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 12V $\overline{\text{---}}$ , 5A) PSE Adaptor (Input : 100-240V~, 50/60Hz, 1.5A, Output : 48V $\overline{\text{---}}$ , 1.35A)
<b>Power Consumption</b>	DR-2508P/DR-2516P NVR: 12V $\overline{\text{---}}$ , 2.2A, 26.4W PSE: 48V $\overline{\text{---}}$ , 1.05A, 50.4W MAX
	DR-2508P-A/DR-2516P-A NVR: 12V $\overline{\text{---}}$ , 2.2A, 26.4W PSE: 54V $\overline{\text{---}}$ , 1.85A, 100W MAX
	DR-2504P/DR-2504P-A NVR: 12V $\overline{\text{---}}$ , 2.2A, 26.4W PSE: 48V $\overline{\text{---}}$ , 0.64A, 30.72W MAX
	DR-2504P-B/DR-2504P-C NVR: 12V $\overline{\text{---}}$ , 2.2A, 26.4W PSE: 48V $\overline{\text{---}}$ , 1.04A, 50W MAX
<b>Approvals</b>	FCC, CE



**IDIS Co., Ltd.**

For more information, please visit at  
[www.idisglobal.com](http://www.idisglobal.com)